



How to setup and configuration the Time mismatch into the printers

## [Find Front panel](#)

[HP Latex 100/300/500 Printer Series , and HP Stitch S300/S500 Printer Series](#)

[HP Latex 3000/1500 Printer Series , and HP Stitch S1000 126-in Printer](#)

[HP Latex 700/800 Printer Series](#)

[HP Latex 3700 Printer Series](#)

[HP DesignJet Z6/Z9 Printer Series](#)


[HP DesignJet Z6 Pro/Z9+ Pro 64-in Printer Series](#)

[HP PageWide XL PRO 5200/10000/8200 Printer Series](#)

[HP PageWide XL 4000/5000/8000 Printer Series](#)





# Find Front panel

START

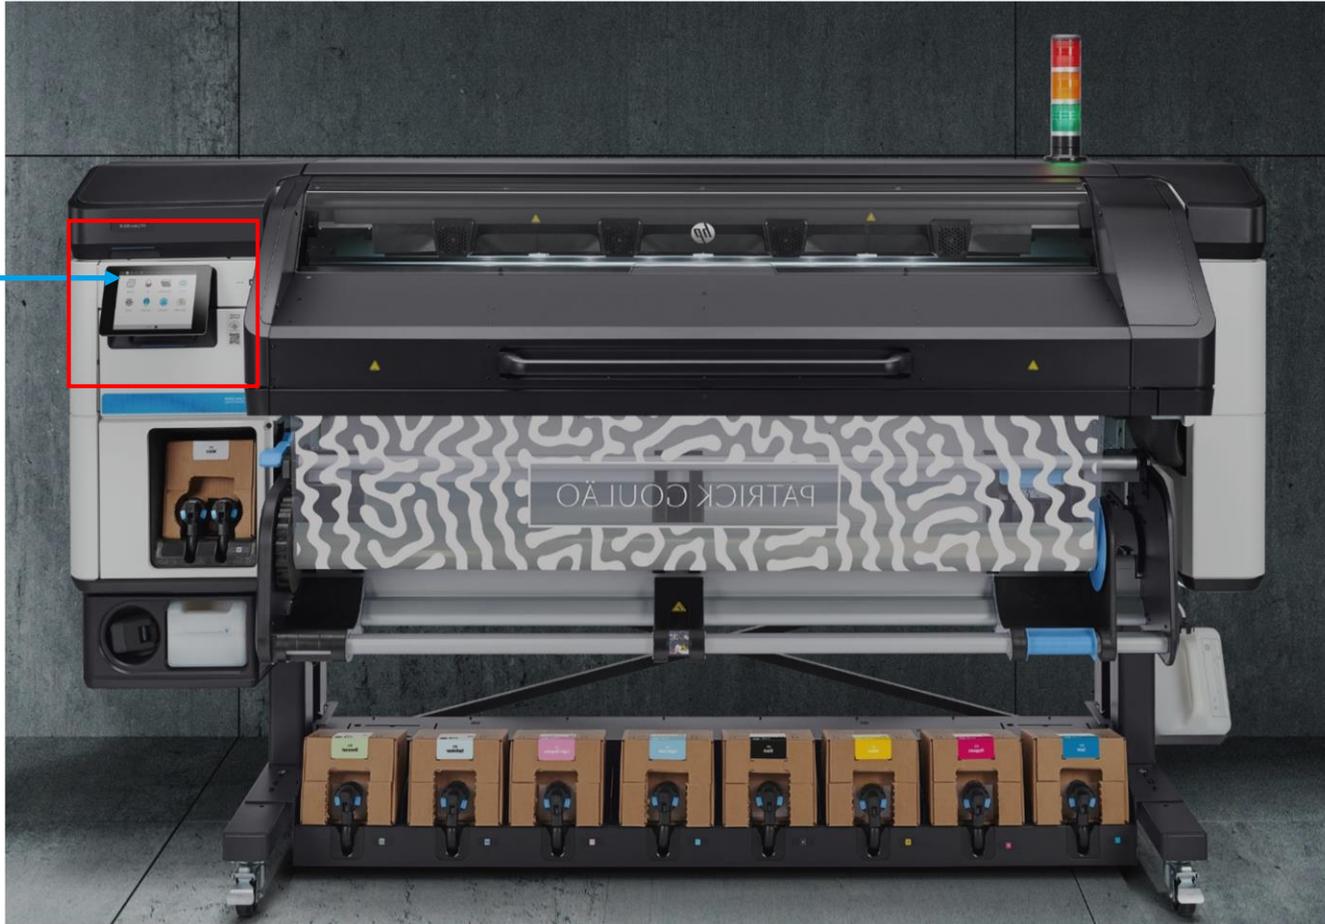

- A. Find Front Panel on the printer

# HP Latex 100/300/500 Printer Series, and HP Stitch S300/S500 Printer Series

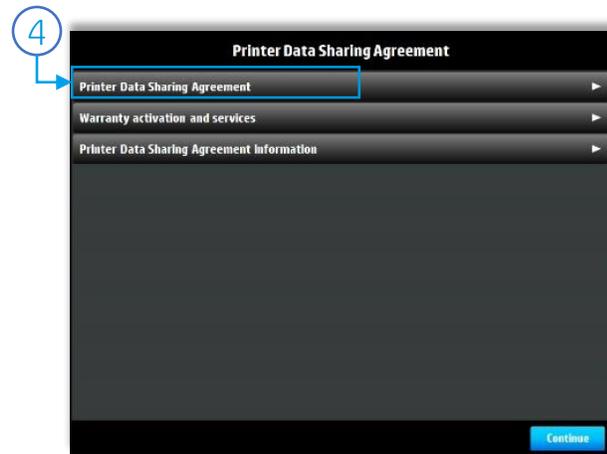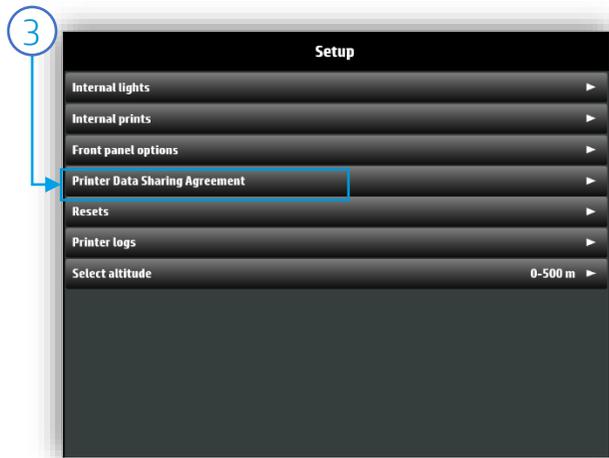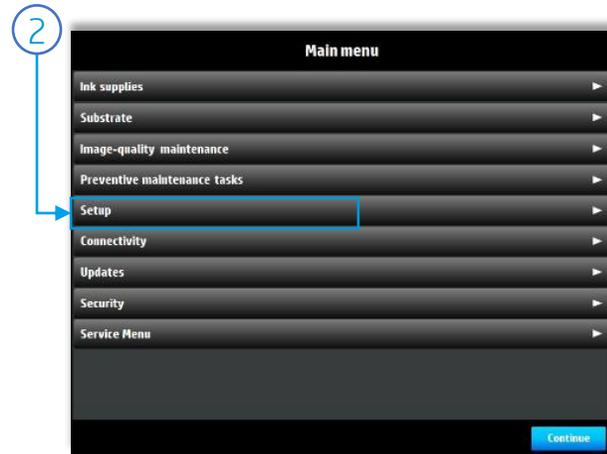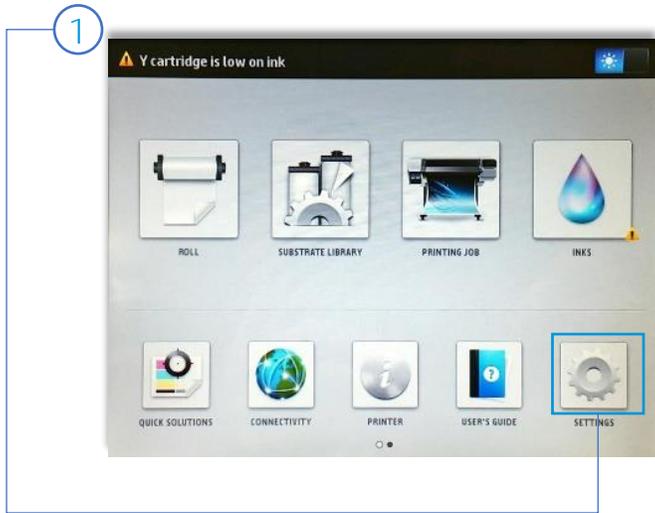

1. Click on **Settings**
2. Click on **Setup**
3. Click on **Printer Data Sharing Agreement**
4. Click again on **Printer Data Sharing Agreement**, Now **Read and Accept** the statement and **Activate PDSA Agreement**